
SECTION 7: OPERATION, DIGI II

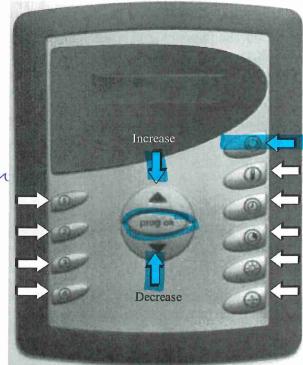

The Digi II 24 hr (UL# 1601-11-1) control model can be set to stay on longer than 60 minutes. This is for commercial use only where an attendant is present.

Memory / User 1

Memory / User 2

Memory / User 3

Memory / User 4

On/Off

Temperature

Delayed Start Time

Sauna Heat Time

Light

Fan

(DTurn on Sauna (or off and back on) 2 view day 1 + me Comect? Done Theoreet? 60+0(3)

Control Setup for Control Model Digi II 60 min (UL # 1601-11):

This setup has 6 different menus.

To escape from this Setup Menus, press the On/Off button or the device will automatically exit the menu in approx. 4 seconds. R (Y) Exit Monu

To enter the Setup Menu press PROG/OK button and hold down for approx. 3 seconds until the following

appears in the display:

MENU 1 TIME:12:00

Setting the Clock: Press the up arrow and hold down: The minutes and hours will begin to change. When the hour reads the correct time, release the up arrow key and enter minutes by repeatedly pressing the arrow key for each minute. Press PROG/OK to save the time in memory.

Then change Day if needed.

Next will display:

MENU 2

LANGUAGE: ENGLISH

Setting Language: Press the up or down arrow key repeatedly until the language you desire appears in the display. Press **PROG/OK** to save the Language in memory.